Maintenance schedule 0509 - K 1300 S, K40 11

00 00 111 BMW Service		
Reading fault memory with BMW Motorrad diagnostic system		
Checking transparency of hose for engine-oil level indicator		
11 00 609 Oil change in engine with filter (for maintenance)	Annually or every 10,000 km	
11 34 502 Checking valve clearance (for maintenance)	every 30,000 km	
12 12 509 Replace all spark plugs (as part of maintenance)	every 30,000 km	
13 72 505 Replace air filter cartridge (for maintenance)	every 40,000 km	
33 00 501 Oil change, rear wheel drive	every two years or every 20,000 km	
Visually inspecting brake pipes, brake hoses and connections		
Checking front brake pads and brake discs for wear		
Checking brake-fluid level, front brakes		
Checking rear brake pads and brake disc for wear		
Checking brake-fluid level, rear brakes		
Checking clutch system		
Checking freedom of movement of throttle cable and checking for kinks and chafing		
Checking coolant level		
Checking tyre pressures and tread depth		
Checking ease of movement of side stand		
Checking lights and signalling equipment		
Function test, engine start suppression		
18 21 510 Lubricating ball-joint clamp (for maintenance)	every 20,000 km	

Final inspection and check of roadworthiness	
Reading fault memory with BMW Motorrad diagnostic system	
Setting service-due date and service countdown distance	
Check the battery charge state	
Confirming BMW Service in on-board documentation	