## Maintenance schedule

## 0432 - R 1100 S

00 00 125 BMW Service with Annual Inspection (see Maintenance Schedule) (annually, initially at 10,000 km, then every 20,000 km)

**Equipment trim-level variant:** 0524 - ABS II

Reading fault-code memories with the BMW Motorrad diagnostic system	
Changing engine oil with engine at operating temperature, replacing oil filter	
23 00 510 Gearbox-oil change (maintenance) *)	every two years
33 00 501 Oil change, rear wheel drive *)	every two years or every 40,000 km
Checking battery acid level	
Cleaning and greasing battery terminals	
Checking front brake discs for wear	
Checking front brake pads for wear	
Checking brake-fluid level, front brakes	
Checking rear brake discs for wear	
Checking rear brake pads for wear	
Checking brake-fluid level, rear brake	
Changing brake fluid, front brakes	
Changing brake fluid, rear brakes	
Checking clutch fluid level	
21 00 505 Change the clutch fluid (during maintenance) *)	every four years
Checking operation of side-stand switch	
Greasing side stand pivot	
Checking condition of spark plugs	
Adjusting valve clearance	
Checking freedom of movement of throttle cable and checking for kinks and ch	afing
Checking/adjusting synchronisation	

Checking tyre pressures and tread depth	
Checking lights and signalling equipment	
Test ride as final inspection and function check	
Confirming BMW Service in on-board documentation	
*) Billed as a separate item not as per the n	ormal schedule