## **Maintenance schedule**

## 0338 - R 1200 ST

00 00 125 BMW Service with Annual Inspection (see Maintenance Schedule) (annually, initially at 10,000 km, then every 20,000 km)

## Equipment trim-level variant:

0636 - Centre stand

0645 - (BMW Motorrad Integral ABS)

0630 - (BMW Motorrad Integral ABS)

Reading fault memory with (BMW Motorrad) diagnostic system	
Engine-oil change, with filter	
23 00 510 Gearbox-oil change (maintenance) *)	every two years or every 40,000 km
Adjusting valve clearance	
Visual inspection of hydraulic clutch system	
34 00 616 Changing brake fluid in Integral ABS wheel circuit, front (as part of maintenance) *)	every two years
34 00 617 Changing brake fluid in Integral ABS wheel circuit, rear (as part of maintenance) *)	every two years
34 00 608 Change brake fluid in entire ABS control circuit (maintenance) *)	every four years
Checking freedom of movement of the throttle cable and checking for k	inks and chafing
Checking tyre pressures and tread depth	
Checking ease of movement of side stand	
Checking ease of movement of centre stand	
Checking lights and signalling equipment	
Function test, engine start suppression	
34 00 650 Brake check for BMW Motorrad Integral ABS (as part of main	ntenance) *)
Checking synchronisation	
Test ride as final inspection and function check	
Reading fault memory with (BMW Motorrad) diagnostic system	
Checking battery charge state	
Confirming BMW Service in on-board documentation	