## Maintenance schedule

## 0477 - R 850 RT

**00 00 125 BMW Service with Annual Inspection (see Maintenance Schedule)** (annually, initially at 10,000 km, then every 20,000 km)

**Equipment trim-level variant:** 0369 - Official-user difference

Reading fault-code memories with the BMW Motorrad diagnostic sys	stem
Changing engine oil with engine at operating temperature, replacing	oil filter
23 00 510 Gearbox-oil change (maintenance) *)	every two years
33 00 501 Oil change, rear wheel drive *)	every two years or every 40,000 km
Checking battery acid level	
Checking acid level of second battery	
Cleaning and greasing battery terminals	
Changing brake fluid in Integral ABS, front wheel circuit	
Changing brake fluid in Integral ABS, rear wheel circuit	
34 00 608 Change brake fluid in entire ABS control circuit (maintenance) *)	every four years
Checking clutch fluid level	
21 00 505 Change the clutch fluid (during maintenance) *)	every four years
Checking operation of side-stand switch	
Greasing side stand pivot	
Checking condition of spark plugs	
Adjusting valve clearance	
Checking freedom of movement of throttle cable and checking for kir	nks and chafing
Brake check for BMW Motorrad Integral ABS	
Checking/adjusting synchronisation	
Checking tyre pressures and tread depth	
Checking lights and signalling equipment	
Test ride as final inspection and function check	
Confirming BMW Service in on-board documentation	

not as per the normal schedule

\*) Billed as a separate item