Maintenance schedule 0534 - S 1000 RR, K46 11

| 00 00 111 BMW Service | |
|--|-----------------------------|
| Performing vehicle test with BMW Motorrad diagnostic system | |
| 11 00 609 Oil change in engine with filter (for maintenance) | Annually or every 10,000 km |
| 11 34 502 Checking valve clearance (for maintenance) | Every 30,000 km |
| 11 30 502 Checking valve timing (cylinder head cover removed) | Every 30,000 km |
| 12 12 509 Replace all spark plugs (as part of maintenance) | Every 30,000 km |
| 13 72 505 Replace air filter cartridge (for maintenance) | Every 10,000 km |
| 31 42 902 Changing fluid in telescopic forks (for maintenance) | Every 30,000 km |
| Visually inspect the brake pipes, brake hoses and connections | |
| Checking front brake pads and brake discs for wear | |
| Checking brake-fluid level, front brakes | |
| Checking rear brake pads and brake disc for wear | |
| Checking brake-fluid level, rear brakes | |
| Checking steering-head bearing | |
| Checking coolant level | |
| Checking play of throttle cable | |
| Checking fastener of clutch lever fitting | |
| Checking clutch cable and clutch-lever play | |
| Lubricating clutch mechanism | |
| Checking drive chain, sprocket and pinion | |
| Checking tire pressures and tread depth | |

| Checking ease of movement of side stand | |
|--|--|
| Lubricating side stand | |
| Check the lights and signaling equipment | |
| Function test, engine start suppression | |
| Final inspection and check of roadworthiness | |
| Performing vehicle test with BMW Motorrad diagnostic system | |
| Setting service-due date and service countdown distance | |
| Checking battery charge state | |
| Confirming BMW Service in on-board documentation | |